

Operating Manual



Copyright © 2013
www.ProTekRC.com

ProTekRC

Thank you for purchasing this scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

Never load the scale with more than the maximum weight capacity. Overloading can permanently damage it!

Avoiding any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least 1 hour before use.

Give your scale sufficient warm up time. Usually 30 seconds to give the internal components a chance to stabilize before calibration.

Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause adverse effects on the reliability and accuracy of your scale.

Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor.

Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.

Only operate the scale on a stable, vibration free surface.

1 OPERATION

Place the Scale on a horizontal flat surface.

- 1 Press **ON/OFF** to turn on the scale and wait until zero is displayed.
- 2 Put the object(s) on the weighing platform.
- 3 Units are switched by pressing the **MODE** button.

2 TARE WEIGHING

- 1 Turn on the scale as described above.
- 2 Place the "tare item" on the platform.
- 3 Press **TARE** button and wait until zero is displayed.
- 4 Add the "net-weight-item".

3 CALIBRATION

- 1 Press **ON/OFF** then immediately press and hold **MODE** button until [CAL] is displayed, release the **MODE** button.
- 2 Press the **MODE** button again, the [CAL] will flash and then flash the required calibrate weight.
- 3 Place the required calibrate weight on the center of platform until the LCD display reads [PASS] and return to normal weighing model.
- 4 Put away calibration weights, and press **ON/OFF** switch to turn off the scale. The calibration is finished.

NOTE: Repeat this process if calibration weight is different than what is displayed

4 SPECIFICATIONS

CALIBRATION: 200 Gram Weight

TARE RANGE: Tare Full Capacity

AUTO OFF TIME: 60 Seconds

OPERATION TEMP: 10-30°C (50-86°F)

DISPLAY: LCD

POWER: 2×CR2032 Batteries

DIMENSIONS: 100x76x14mm

WEIGHT: 110g