

## Pivotal Seat and Post Install




### Parts

- A. Pivotal Seat
- B. Pivotal Seat Post

### Tools Needed

1. 6mm Allen Wrench
2. 3 Way Allen Wrench (4,5 and 6mm)

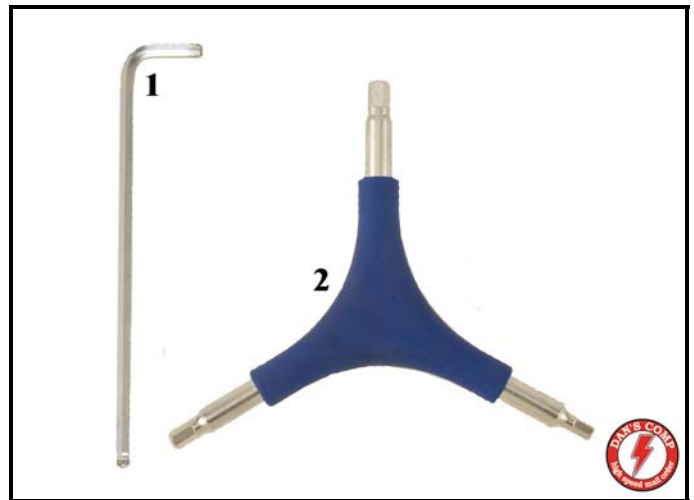

### Accessing the Allen Bolt

- Open the slot on the top of the seat using the 6mm allen wrench and insert it into the head of the allen bolt.
- You may have to feel around with the end of the allen wrench to find the head of the allen bolt.

*These instructions are to be used as a guide only. Improperly installed parts may lead to severe injury or harm. We strongly recommend that a properly trained bike mechanic handle all installations, adjustments and repairs on your bike. As always...Ride Safe!*

## Pivotal Seat and Post Install

### Installing the Seat

- Thread the allen bolt clockwise into the top of the seat post. Do not tighten it completely.



### Installing the Seat Post in the Frame

- Install the seat and post in your frame to the desired height. Again, do not tighten completely.
- With the seat and post installed into the frame, you'll need to set the seat to the desired angle.
- As a Rule of Thumb, align the top of the seat parallel to the top of the top tube of the frame.
- Once you've adjusted the seat angle, line up the grooves on the top of the seat post and the bottom of the seat and completely tighten the allen bolt in the seat.

### Last, but not least...

- Standing behind the seat and looking down toward the top tube of the frame, line up the front of the seat with the top tube.
- Tighten the seat post clamp completely.



*These instructions are to be used as a guide only. Improperly installed parts may lead to severe injury or harm. We strongly recommend that a properly trained bike mechanic handle all installations, adjustments and repairs on your bike. As always...Ride Safe!*